



## Quick Connect AC Return Mount For Airstream Install Instructions

Website: <https://wanderingmade.com>  
For questions: [wanderingmade@gmail.com](mailto:wanderingmade@gmail.com)

Video Instructions: <https://www.youtube.com/@wanderingmade>

### Packing / Parts List

- 1. Return Mounting Plate x 2
- 2. Grille Mounting Plate x 2
- 3. M3x5mm Phillips flat head bolts x 8
- 4. Retaining Disk (Optional) x 8
- 5. Werther's Originals x 2




### Required Tools

- Phillips Head Screwdriver

### Optional Tools

- Pliers
- Cleaning Cloth

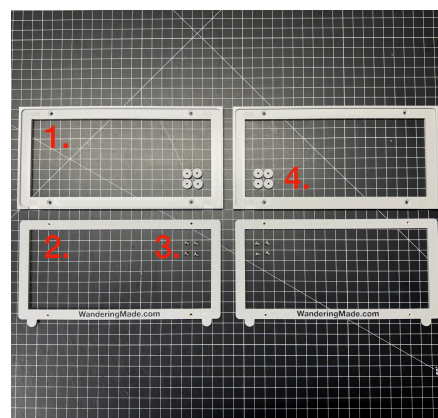

**Note:** Do not over tighten screws, parts are made of plastic. Over tightening might strip the plastic. Snug is tight enough.

**Step 1.** Unwrap and eat one Werther's Originals.

**Step 2.** Remove AC return grille using a Philipps head screw driver. Retain all hardware as it will be reused to install the return mounting plate. Repeat for second return grille.

**Note:** This would be a good time to use a cleaning cloth to clean around the air return cutout if needed.





**Step 3.** Using the original hardware, mount the return mounting plate in position of the original return grille. Please note the direction of the **notches** and make sure they are facing the direction you would like the tabs of the grille mounting plate to face. Repeat for second vent.

**Step 3.1** If your mounting holes in the aluminum are worn out you can use the included retaining disk on the back side of the holes inside the return vent. You may need pliers to hold the disk while tightening the screws. Repeat for second vent.

**Note:** For **Step 3** make sure you are using the original return grille hardware (removed in Step 2) as other hardware could cause the aluminum ceiling to oxidize.

**Step 4.** Remove the filter from the return grille. Using the included M3x5mm Phillips flat head countersunk bolts, mount the filter mounting plate to the back of the return grille. Make sure the notches are facing the return grille and that [WanderingMade.com](http://WanderingMade.com) is facing away. Do not over tighten.



**Step 5.** Reinstall the filter into the return grille

**Step 6.** Snap the grille into the return mounting plate making sure the **taps** on the return grille **align** with **notches** on the return mounting plate.

**Step 7.** If you have only one AC then you are all done please enjoy your second Werther's Originals as a reward. If you do have a second AC please repeat Step 1-6.

